

Powering on the Projector

- Point the projector remote at the projector and press and hold the ON button until you see that the light on the front of the projector is illuminated.

Using the Computer with the Projector

- Turn on the computer by pressing the computers power button.
- To log into the computer, the username is student and the password is sjc.
- If the computer screen is not displayed on the wall, point the projector remote at the projector and press the RGB/RGB1 button.
- To turn off the projector lamp, press the Pic Mute button located on the projector remote. To turn lamp back on, press the Pic Mute button once again.

How to Listen to the Audio from the Computer

- See above directions to power on the projector and computer.
- Turn the receiver on (BLACK unit) by pressing the power button.
- On the receiver (BLACK unit), press the button labeled CD. The button is indicated by a yellow dot. ●

Using the DVD/VHS Player

- Turn the receiver on (BLACK unit) by pressing the power button.
- For Both VCR and DVD, press the DVD button on the receiver. The button is indicated by a red dot. ●
- On the VCR/DVD player (SILVER unit), press the power button.
- Press the VCR/DVD button on the DVD/VCR player to toggle between VCR/DVD. (*A green light under the VCR or DVD will indicate which unit is presently activated/turned on.*)
- If the Video/DVD is not displayed, press the Video button on the projector remote to switch to VCR/DVD mode.
- If you have a VHS tape, place it into the VHS slot.
- If you are using a DVD, press the open/close button to open the DVD tray. Place the DVD in the tray and press the open/close button to close it.

Volume can be controlled by turning the big black knob located on the receiver.

Please Power Off All Equipment When Done

For Technical Issues Please Call the Helpdesk at x1263