

- Remotes are locked in draw on right side of cart. Point the NEC projector remote at the front of the projector and press and hold the ON button until you see that the light on the front of the projector is illuminated.

Using the Computer with the Projector

- Turn on the computer by pressing the computer's power button.
- To log into the computer, the username is student and the password is sjc.
- If the computer screen is not displayed on the wall, point the projector remote at the projector and press the Computer 1 button.
- To temporarily turn off the projector lamp, press the Pic-Mute button located on the NEC projector remote. To turn the lamp back on, press the Pic-Mute button again.

How to Listen to the Audio from the Computer

- See above directions to power on the projector and computer.
- Turn the receiver on (SILVER unit on the bottom) by pressing the power button on the left side.
- On the receiver (SILVER unit), turn the "Source Selector" dial until TV is displayed on the front.
- Volume can be controlled by turning the "Master Volume" dial located on the right most side of the receiver.

Using the DVD/VHS Player

- Turn the receiver on (SILVER unit) by pressing the power button.
- For Both VCR & DVD, turn the "Source Selector" dial on the receiver until DVR/DVD is displayed on the front.
- On the VCR/DVD player (SILVER unit on the top), press the power button.
- If you have a VHS tape, place it into the VHS slot.
- If you are using a DVD, press the open/close button to open the DVD tray. Place the DVD in the tray and press the open/close button to close it.
- Press the VCR/DVD button on the DVD/VCR player to toggle between VCR/DVD mode. *(The front display panel will indicate which unit is presently activated/turned on.)*
- If the Video/DVD is not displayed, press the Video button on the NEC projector remote to switch to VCR/DVD mode.

Volume can be controlled by turning the "Master Volume" dial located on the right most side of the receiver.

**Please Power Off All Equipment When Done**

**For Technical Issues Please Call the Helpdesk at x1263**